



**Goodtone**

**ARICO**





## ARICO Chair

This high-end luxury office chair were built for senior executive. Integrated molding of the armrest and the mechanism is the principal of ARICO, developed multi-function mechanism while successfully minimised its size. The structure of tension tilt in a fast responding saving up to 90% of workload. In a restoration, Inner spring inside the

mechanism provides an efficient support to users. Goodtone's products will always be designed based on customer's needs, focus on details to create excellent seating experience.

— Designed by Peter Horn



# ARICO

Office chair series



ARICO-A



ARICO-B



ARICO-D



ARICO-E

The meaning of Good design should more than just being a high price luxury product. GOODTONE has managed to produce Good design products that everyone can have with quality assurance.

- |                                |                                   |
|--------------------------------|-----------------------------------|
| 1. Upholstery / Leather、Fabric | 5. Mechanism / Aluminum Alloy +PP |
| 2. Armrest / Aluminum Alloy    | 6. Gas-lift / Steel               |
| 3. Backrest / PA+GF20%         | 7. Base / 340mm Aluminum Alloy    |
| 4. Seat / PA+GF20%             | 8. Caster / Back PU               |

## Genuine Leather/ Microfiber PU



AR-L01 / AR-P01  
Black



AR-L02 / AR-P02  
Brown



AR-L03 / AR-P03  
Cool Gray



AR-L04 / AR-P04  
Light Brown



AR-L05 / AR-P05  
Grey


## Fabric



AR-F01  
Black



AR-F02  
Grey





AR-F03  
Blue



AR-F04  
Pink



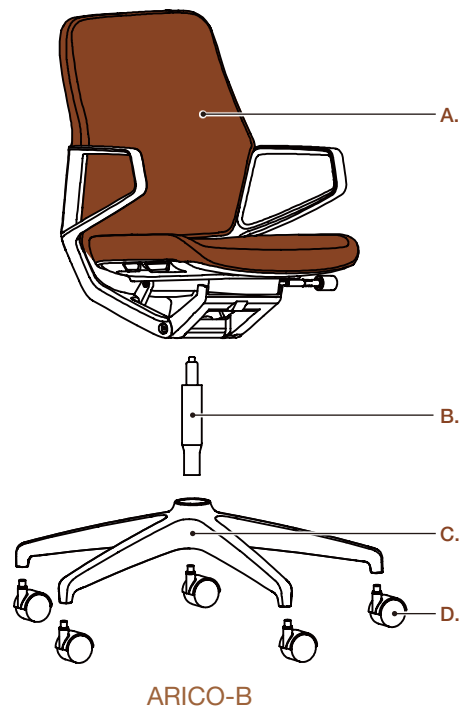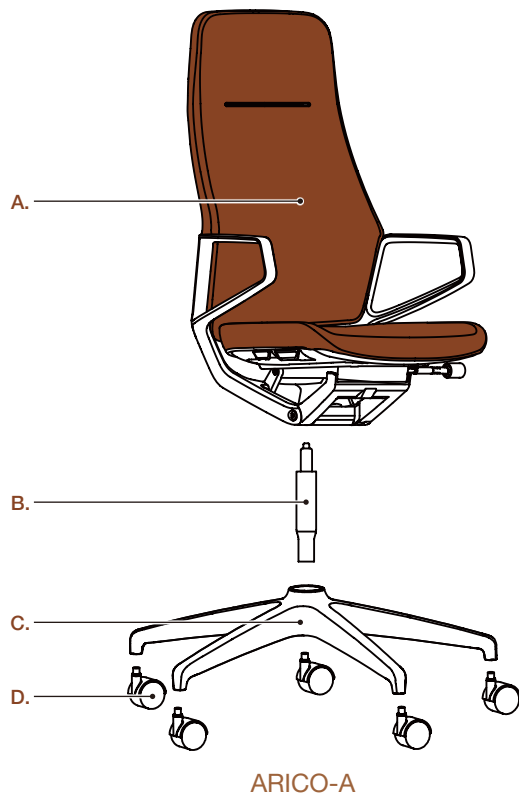

# ARICO Specification Reference



ARICO-A



ARICO-B

Height	1125 ~ 1190mm	980~1045mm
Seat depth	595mm	560mm
Seat width	605mm	605mm
Distance from floor to seat	440~505mm	440~505mm
Backrest width	525mm	525mm
Distance from seat to the top of backrest	685mm	540mm
Width between armrest	540mm	540mm
Distance from floor to armrest	635~700mm	635~700mm
From seat to armrest	195mm	195mm
Tilt angle degree	25°	25°



ARICO-D



ARICO-E

Height	960~1060mm	975~1075mm
Seat depth	580mm	580mm
Seat width	605mm	605mm
Distance from floor to seat	430~530mm	445~545mm
Backrest width	525mm	525mm
Distance from seat to the top of backrest	530mm	530mm
Width between armrest	540mm	540mm
Distance from floor to armrest	630~730mm	645~745mm
From seat to armrest	200mm	200mm
Tilt angle degree	14°	14°

## Function

- 1 Sliding seat** / Function key located on the right hand side of the mechanism



Pull out function key for sliding function

Adjust Sliding seat so that hips and knees are at a 90 degrees angle, it reduces tiredness.

- 2 Height Adjustment** / Control rod located on the right hand side of mechanism



To lower seat, place your full weight on the chair, and engage actuator lever. When the desired height is reached, release the actuator. To raise the seat, shift your weight to your feet. Engage actuator. Chair will rise automatically

Position chair so your feet are flat on the floor, and lower legs are at a 90-degree angle (or better) relative to upper legs.

- 3 Tension Tilt** / Control rod located on the left hand side of mechanism



Twirl outward to increase tension



Twirl inward to release tension

Tension tilt offers more secure and comfortable working environment.

- 4 Tilt Lock** / Control rod located on the left hand side of mechanism



Pull out the control rod to unlock tilt function and adjust, relock control rod when desired angle reached

Tilt lock allows users to sit in an upright position for keyboarding, while providing a comfortable rocking/reclining motion during work or break.

**Leather office chair:** Please gently wipe it with a half-wet sponge dipped with special detergents and service it with the leather servicing agent after wiping it dry with the dry cloth. If it is dipped with water, it should be immediately wiped dry. Besides, avoid the long-time direct sunlight.

**Net surface and cloth office chair:** Please slap with hand or use the dust collector to clean the dust on it. If there are stains, locally clean and dry it naturally with special detergents.

**Armrest, support and chair leg:** For aluminum alloy materials, please clean them with a dry cloth or nonferrous metal detergents; For plastic materials, please clean them with half-wet cloth dipped with clear water.

**Chair wheel:** Clean fur crumbs fiber and other sundries periodically and protect chair wheels with anti-static sprays.

## Quality assurance and after-sales service

### FIVE-YEAR QUALITY ASSURANCE

In case the product is damaged due to its quality reasons within five years from the purchasing date, the Buyer can show the purchasing proof and the Company will repair the product for free.



#### ! Notice

The quality assurance service is not applicable for the improperly stored, assembled and used product, and does not include the damage to the product due to the normal abrasion and tearing, cutting and scraping or striking or accidents.



After opening the package of the product, please carefully check the product for part lack or transportation damage. If any, please contact the dealer timely.



Please place it on the indoor stable floor and prevent it from fire or exposure to blazing sun for a long time and humid environment.



The product can only be used by one person.



Please do not seat at the edge of the chair.



Please do not step on it or stand on the product to get something.



Please do not incline the chair backrest excessively.



Please do not lean against the product except in normal sitting posture to avoid tumbling due to the unbalance.



Please prevent the product from scratching or striking by sharp or hard tools.



Please notice the spontaneous loose phenomenon of bolts. If any, please stop using and repair the product immediately.

