



VIX





Goodtone



VIX Chair

The attitude of rolling back to the 'fundamental truths' on our life bought up the inspiration to create VIX chair in a minimalism style. From get ride of the redundant part to focus on the comfortability and practicability, VIX chair represents quite and peace.

— Designed by JOYN

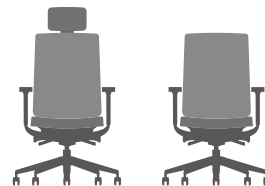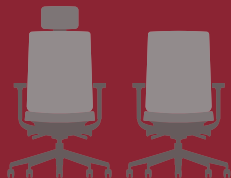

VIX-A

VIX-B



VIX-A1

VIX-B1

The meaning of Good design should more than just being a high price luxury product. GOODTONE has managed to produce Good design products that everyone can have with quality assurance.

1. Upholstery / Mesh
2. Armrest / PA66+GF30%
3. Backrest / PA66+GF35%、PA66+30%GF
4. Seat / PA66+30%GF、Foam
5. Mechanism / Steel Board Aluminum Alloy + PP
6. Gas-lift / Steel
7. Base / 340mm Aluminum Alloy
8. Caster / Back PU

Mesh



Jacinth

Black

Grey

Blue

Green

Fabric




Jacinth

Black


Grey

Blue


Green

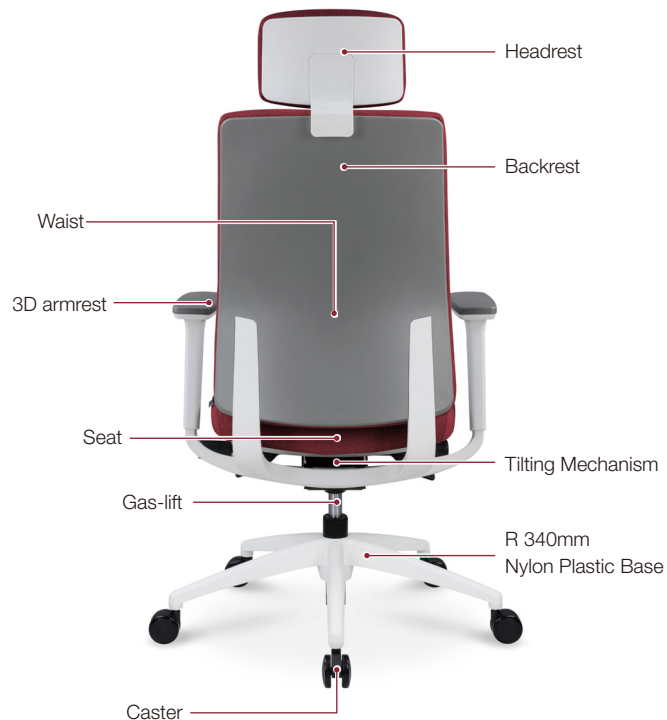


Installation

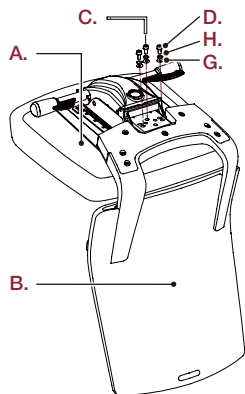


Step 1

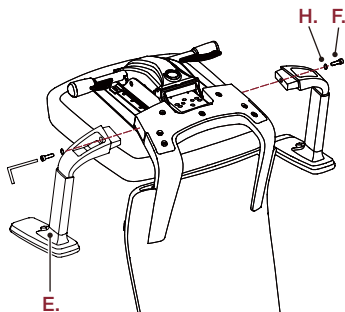

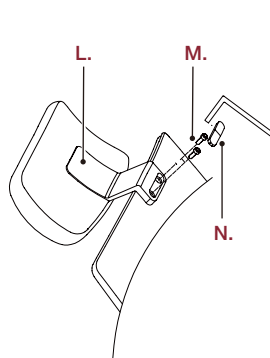


Step 2



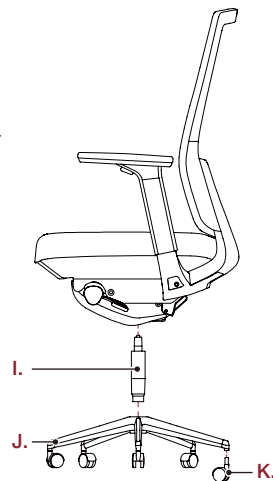


Step 3



Step 4

C	x1	D	x3	F	x2
					
M5		M8*20		M8*50	

G	x3	H	x3	M	x2
					
M8 Ø 22*1.5		M8 Ø 13*2.3		M6*16	

1 Headrest / On the top of backrest(VIX-A)



Hold tie the front cushion of the headrest by both hands, pull up or down to adjust

To intensify the seating comfort by supporting the cervical vertebra.

3 Sliding Seat / Function key located on the left hand side of the mechanism



pull up the hand rod for sliding function then release when desired level reached

Adjust Sliding seat so that hips and knees are at a 90 degrees angle, it reduces tiredness.

2 3D Armrest / Function key placed under armpad



Press the button for height adjustment



Push armpad for depth adjustment



Rotate armpad for angle adjustment

Armrest can reduce tiredness to arms and shoulders.

4 Tilt Lock in five positions / Control rod on the left hand side of mechanism



Twirl outward to engage tilt lock



Twirl inward to engage release

Tilt lock allows the user to sit in an upright position for keyboarding, while providing a comfortable rocking/reclining motion during work or break.



5 Tension Tilt / Control rod on the right hand side of mechanism



Twirl outward to increase tension



Twirl inward to release tension


Tension tilt offers more secured and comfortable working environment.

6 Height Adjustment / Control rod on the right hand side



To lower seat, place your full weight on the chair, and engage actuator lever. When the desired height is reached, release the actuator. To raise the seat, shift your weight to your feet. Engage actuator. Chair will rise automatically

Position chair so your feet are flat on the floor, and lower legs are at a 90-degree angle (or better) relative to upper legs.

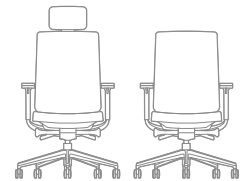

VIX Specification Reference



VIX-A



VIX-B

Height	1185~1265mm	990~1070mm
Seat depth	600~650mm	600~650mm
Seat width	650mm	650mm
Distance from floor to seat	450~530mm	450~530mm
Backrest width	475mm	475mm
Distance from seat to the top of backrest	735mm	540mm
Width between armrest	490mm	490mm
Distance from floor to armrest	630~710mm	630~710mm
From seat to armrest	185~265mm	185~265mm
Tilt angle degree	25°	25°



VIX-A1



VIX-B1

Height	1185~1265mm	990~1070mm
Seat depth	600~650mm	600~650mm
Seat width	665mm	665mm
Distance from floor to seat	450~530mm	450~530mm
Backrest width	485mm	485mm
Distance from seat to the top of backrest	735mm	540mm
Width between armrest	490mm	490mm
Distance from floor to armrest	630~710mm	630~710mm
From seat to armrest	170~240mm	170~240mm
Tilt angle degree	25°	25°

Leather office chair: Please gently wipe it with a half-wet sponge dipped with special detergents and service it with the leather servicing agent after wiping it dry with the dry cloth. If it is dipped with water, it should be immediately wiped dry. Besides, avoid the long-time direct sunlight.

Net surface and cloth office chair: Please slap with hand or use the dust collector to clean the dust on it. If there are stains, locally clean and dry it naturally with special detergents.

Armrest, support and chair leg: For aluminum alloy materials, please clean them with a dry cloth or nonferrous metal detergents; For plastic materials, please clean them with half-wet cloth dipped with clear water.

Chair wheel: Clean fur crumbs fiber and other sundries periodically and protect chair wheels with anti-static sprays.

Quality assurance and after-sales service

FIVE-YEAR QUALITY ASSURANCE

In case the product is damaged due to its quality reasons within five years from the purchasing date, the Buyer can show the purchasing proof and the Company will repair the product for free.



! Notice

The quality assurance service is not applicable for the improperly stored, assembled and used product, and does not include the damage to the product due to the normal abrasion and tearing, cutting and scraping or striking or accidents.



After opening the package of the product, please carefully check the product for part lack or transportation damage. If any, please contact the dealer timely.



Please place it on the indoor stable floor and prevent it from fire or exposure to blazing sun for a long time and humid environment.



The product can only be used by one person.



Please do not seat at the edge of the chair.



Please do not step on it or stand on the product to get something.



Please do not incline the chair backrest excessively.



Please do not lean against the product except in normal sitting posture to avoid tumbling due to the unbalance.



Please prevent the product from scratching or striking by sharp or hard tools.



Please notice the spontaneous loose phenomenon of bolts. If any, please stop using and repair the product immediately.

