



Goodtone







simple but comfort, tidy and multi-purposed interpreting BUTTERFLY Chair Series. Design team were hoping to create a chair brings joy and relaxed environment.

With no restriction of use on any scene Butterfly chair is a good choice to be used at home and at the office.

- Designed by Martin Ballendat









BUTTERFLY-A

BUTTERFLY-B





BUTTERFLY-A1 BUTTERFLY-B1

The meaning of Good design should more than just being a high price luxury product. GOODTONE has managed to produce Good design products that everyone can have with quality assurance.

- 1. Upholstery / Mesh Fabric
- 2. Armrest / PA +PU Armrest Pad
- 3. Backrest / PA+GF30%
- 4. Seat / PA+GF30% Sponge

- Mechanism / Steel Board +
 Aluminum Aolly +PP
- 6. Gas-lift / Steel
- 7. Base / 350mm Nylon Plastic
- 8. Caster / PU

Mesh



BU-M01 / Black BU-M02 / Grey

Fabric






BU-F01 / Black


BU-F02 / Grey





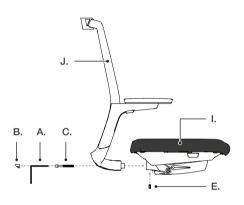

Step 1





Step 2





Hold tie the front cushion of the headrest by both hands,pull up or down to adjust

To intensify the seating comfort by supporting the cervical vertebra.

2 Lumbar Support / At the back of the chair



Pull up or down the lumbar support by both hand at the same time

Lumbar support may result in relief of lower back pain especially in a long working hour. 3 3D Armrest / Function key placed under armpad



press button for height adjustment

Push armpad for depth adjustment

Rotate armpad for angle adjustment

Armrest can reduce tirednes to arms and shoulders

4 Sliding Seat / Function key located on the right hand side of the mechanism



pull up the hand rod for sliding function then release when desired level reached

Adjust sliding seat so that hips and knees are at a 90 degrees angle, it reduces tiredness.





Twirl outward to engage tilt lock

Tilt lock allows the user to sit in an upright position for keyboarding, while providing a comfortable rocking/reclining motion during work or break.

6 Tension Tilt / Control rod on the right hand side of mechanism



Twirl o

Twirl outward to increase tension



Twirl inward to release tension

Tension tilt offers more secure and comfortable working environment.

7 Height Adjustment / Control rod on the right hand side



‡

To lower seat, place your full weight on the chair, and engage actuator lever. When the desired height is reached, release the actuator. To raise the seat, shift your weight to your feet. Engage actuator. Chair will rise automatically

Position chair so your feet are flat on the oor, and lower legs are at a 90-degree angle (or better) relative to upper legs.

BUTTERFLY Specification Reference









BUTTERFLY-A

BUTTERFLY-B

Height	1225~1385mm	1025~1145mm
Seat depth	600~655mm	600~655mm
Seat width	640mm	640mm
Distance from floor to seat	445~565mm	445~565mm
Backrest width	495mm	495mm
Distance from seat to the top of backrest	780~820mm	580mm
Width between armrest	470mm	470mm
Distance from floor to armrest	625~800mm	625~800mm
From seat to armrest	180~235mm	180~235mm
Tilt angle degree	25°	25°





BUTTERFLY-A1

BUTTERFLY-B1

	BUTTENFLT-AT	BUTTENFLI-BT
Height	1225~1385mm	1025~1145mm
Seat depth	600~655mm	575~630mm
Seat width	640mm	640mm
Distance from floor to seat	445~565mm	445~565mm
Backrest width	495mm	495mm
Distance from seat to the top of backrest	780~820mm	580mm
Width between armrest	470mm	470mm
Distance from floor to armrest	625~800mm	625~800mm
From seat to armrest	180~235mm	180~235mm
Tilt angle degree	25°	25°



After opening the package of the product, please carefully check the product for part lack or transportation damage. If any, please contact the dealer timely.



Please place it on the indoor stable floor and prevent it from fire or exposure to blazing sun for a long time and humid environment



The product can only be used by one person.



Please do not seat at the edge of the chair.



Please do not step on it or stand on the product to get something.



Please do not incline the chair backrest excessively.



Please do not lean against the product except in normal sitting posture to avoid tumbling due to the unbalance.



Please prevent the product from scratching or striking by sharp or hard tools.



Please notice the spontaneous loose phenomenon of bolts. If any, please stop using and repair the product immediately.

Leather office chair:

Please gently wipe it with a half-wet sponge dipped with special detergents and service it with the leather servicing agent after wiping it dry with the dry cloth. If it is dipped with water, it should be immediately wiped dry. Besides, avoid the long-time direct sunlight.

Net surface and cloth

office chair:

Please slap with hand or use the dust collector to clean the dust on it. If there are stains, locally clean and dry it naturally with special detergents.

chair lea:

Armrest, support and For aluminum alloy materials, please clean them with a dry cloth or nonferrous metal detergents; For plastic materials, please clean them with half-wet cloth dipped with clear water.

Chair wheel:

Clean fur crumbs fiber and other sundries periodically and protect

chair wheels with anti-static sprays.

Quality assurance and after-sales service

FIVE-YEAR QUALITY ASSURANCE

In case the product is damaged due to its quality reasons within five years from the purchasing date, the Buyer can show the purchasing proof and the Company will repair the product for free.





The quality assurance service is not applicable for the improperly stored, assembled and used product, and does not include the damage to the product due to the normal abrasion and tearing, cutting and scraping or striking or accidents.

